


پترو فرهان گستر جنوب

Q Tehran, Tehransar



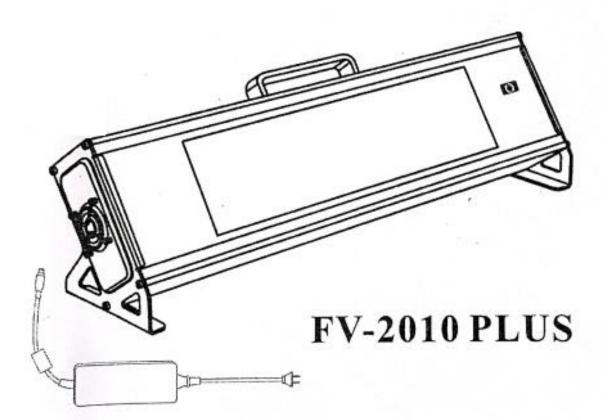


Wen Zhou Lu Cheng NDT Equipment Corp.



Instruction:

The LED Industrial X-Ray Film Viewer FV-2010 Plus combines advantages of both domestic and foreign film viewers, overcome various defects of traditional fluorescent lamp film viewers, such as low luminance, poor contrast and short lifetime. It is developed according to the Norm of ISO5580 Industrial radiographic illuminators - Minimum requirements. Thanks to the portable, rugged and smart design, FV-2010 Plus is extremely suitable for fieldwork. And the maximum luminance can be high to 100,000 Cd/M². It will come to be your right-hand man of you for sure.

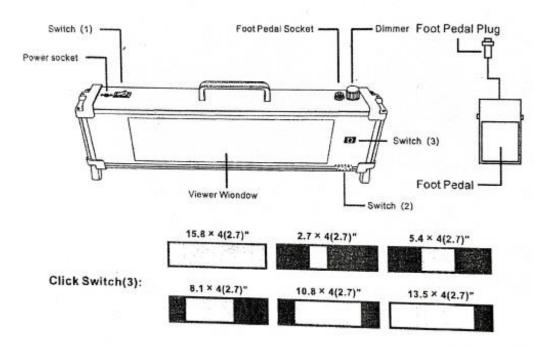

Specification:

- 1. Maximum luminance: See Product Certificate attached
- 2. View films to H/D: See Product Certificate attached
- 3. Average color temperature = 6000~6200K
- 4. Uniformity: See Product Certificate attached
- 5. Diffusion Factor: See Product Certificate attached
- 6. Maximum size of view windows: 400*100mm
- 7. Power supply: 47~63Hz 85~264VAC (Full range)
- 8. Power consumption: 150W
- 9. Dimension: 23.6×3.1×6.3", 600×80×160mm (L*W*H)
- 10. Weight: 4Kg



Usage Tips:

Foot mode (Recommended): turn the switch (2) to "-", enable the foot-switch. Plugged in, then turn the switch (1) to "O", and the viewer will start-up in the minimum luminance, with its' help, your eyes will be protected. Whenever you press down the foot-switch, the viewer will start-up in the luminance that you have already set, you can adjust the luminance by dimmer.

*How to adjust the standby luminance when using foot mode?

- a. Connect the foot pedal to the film viewer
- b. Activate foot mode (Turn the switch 2 to "-")
- c. Keep pressing foot pedal
- d. Turn on the viewer (Switch 1)
- e. When the light is on, release the foot pedal
- f. Each time you press the foot pedal, the luminance can be adjusted from week to strong (8 grades). When it reaches the luminance you need, turn off the film viewer.
- g. Before you restart the viewer, please wait 30 seconds to make sure the viewer have been totally turned off.
- Hand mode: turn the switch (2) to "O", disable the foot-switch. Plugged in, then turn the switch (1) to "-", and the viewer will start-up in the luminance that you have already set, you can adjust the luminance by dimmer.


Quick Answer:

Condition 1: No matter how to rotate the dimmer knob, lights are always very dark.

calution: please check whether the switch (2) is "-". If is in "-", it means that the viewer is current selected pedal model, and the viewer at the STAND BY LUMINANCE, you can only step on the pedal switch to maximum brightness of light, meanwhile adjust brightness by the dimmer knob.

Condition 2: How set totally darkness when foot pedal released.

Solution: See the TIPS. Set the lowest grade. Turn off the viewer, keep the viewer off for more than 30 seconds, restart the viewer.

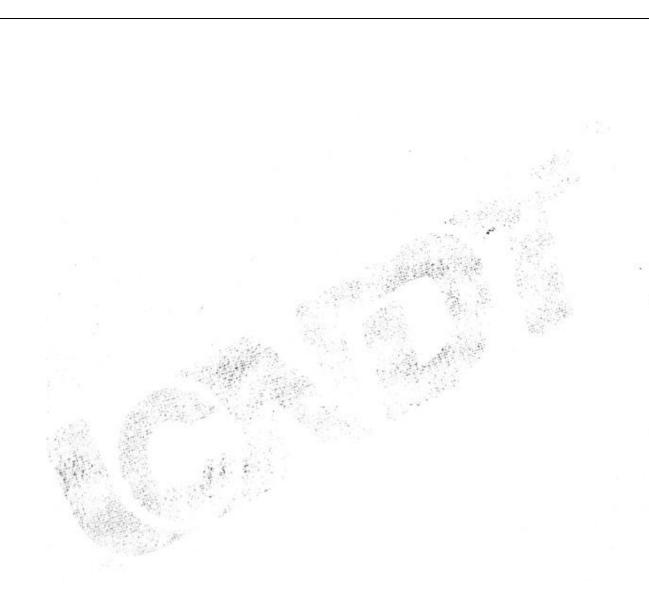

Wen Zhou Lu Cheng NDT Equipment Corp.

ADD: 4TH FLOOR, WORKSHOP NO. 2, No. 16 TIANTAISHAN ROAD, WENZHOU ECONOMIC AND TECHNOLOGICAL DEVELOPMENT ZONE,

ZHEJIANG PROVINCE, P.R. CHINA

POST CODE: 325011

TEL/FAX: 86-577-86760456 HTTP://WWW.LCNDT.NET E-MAIL: LCNDT@163.COM

(a) +982165565901

© +982144584619

+989034119385

پتروفرهان گستر جنوب

FGJ-NDT.IR
DIGINDT.IR